
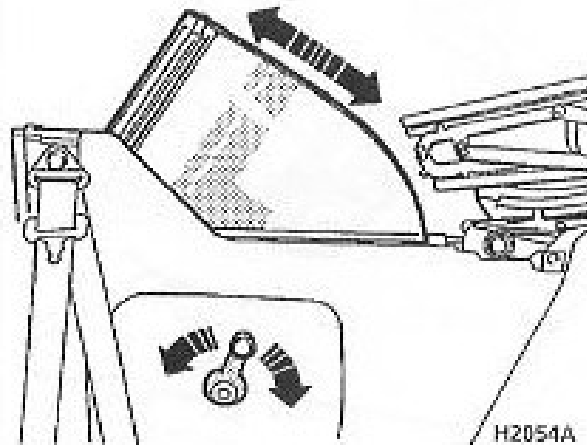


# Windows

## Front windows

Turn the regulator handle to open or close the door window as required.

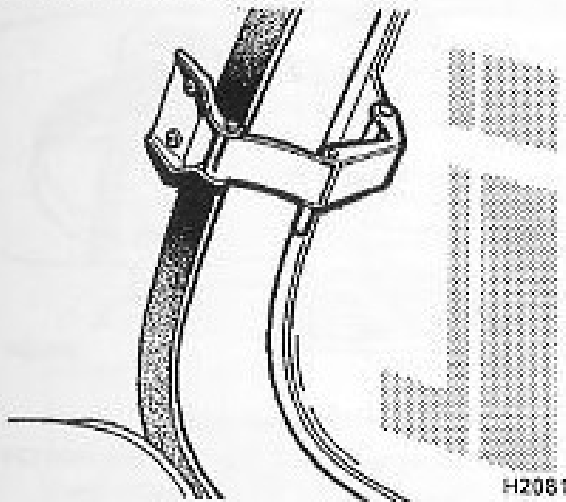

## Rear ventilators \*

To open, pull the the catch forwards and push outwards.

To close, pull the centre of the catch inwards and then push rearwards until the catch is felt to snap into the locked position.

## Rear windows \*

The rear windows on Cabriolet models open and close by pivoting about a forward point when the regulator handle is turned.

To close the window turn the regulator handle till the leading edge of the glass is vertical and resistance is felt on the handle.

**CAUTION:** Do not try to force the window any further when resistance is felt on the handle as this can lead to damage of the window mechanism and seals.

## WARNING!

To reduce the risk of personal injury, care must be taken that the windows are not obstructed when being raised to the closed position. To prevent child induced accidents or personal injury DO NOT leave children inside the car without adult supervision.