


## Wheel Changing

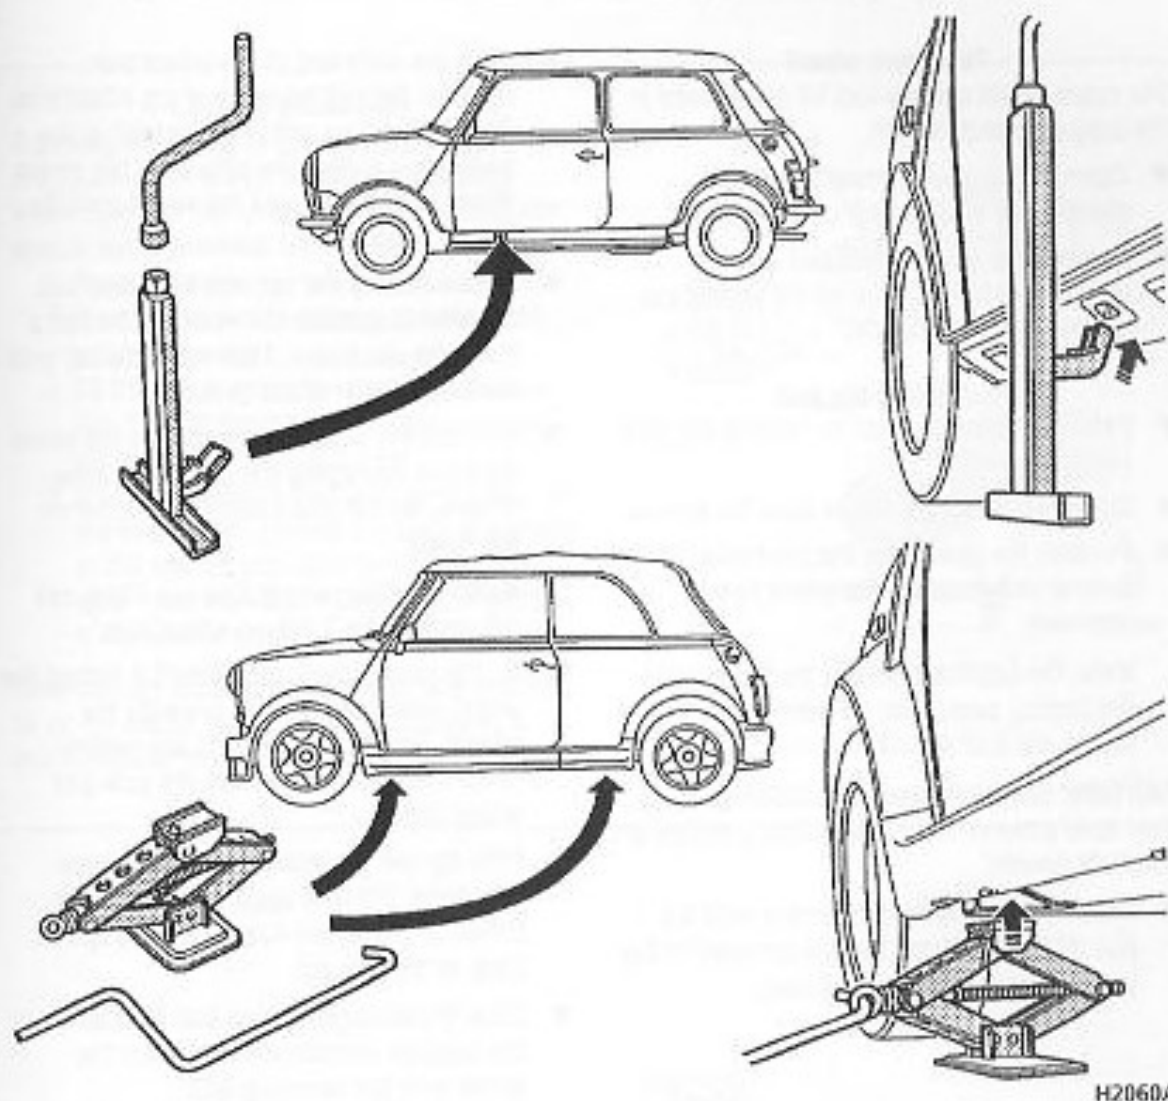

### WARNING!

To avoid injury from passing vehicles, try to park your car away from the thoroughfare and make your passengers wait in a safe area away from the disabled vehicle.

**ALWAYS** switch on the hazard warning lights and use any other warning devices available to alert other road users.

**NEVER** jack the car with people inside.

**NEVER** work beneath the car with the jack as the only means of support. The jack is designed for wheel changing only and should not be used for any other purpose.

**ALWAYS** apply the handbrake and engage 1st gear. If jacking the car on a slope, place chocks at the front and the rear of the wheel diagonally opposite the one to be removed.