


Seats

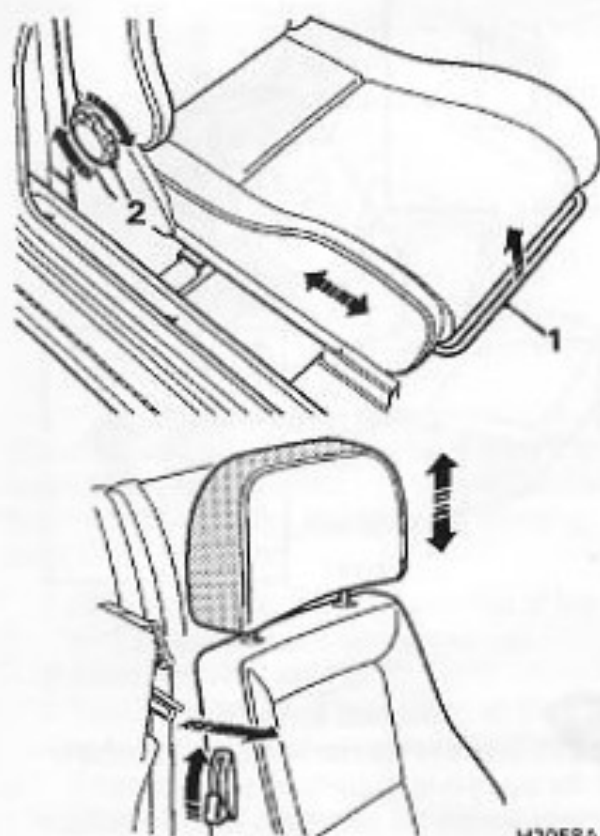

H2058A

SEATS - Cabriolet Models

Front seat adjustment

Lift the bar (1) and slide the seat forward or backward to the required position. Lower the bar and check that the seat is locked into position before driving.

Backrest adjustment

Ease your body weight from the backrest and rotate the handwheel (2) to adjust the backrest to the required angle.

Rear seat access lever

Lift the lever to fold the front seat backrest forward. Ensure the backrest is securely locked when returned to its normal position.

Head restraint adjustment

Head restraints are fitted for safety and should always be adjusted to support the back of the head and NOT the neck. Properly adjusted head restraints can considerably reduce the risk of neck or head injuries. For this reason you should never carry passengers in seats where the head restraints have been removed.

Raise or lower the head restraint as required.

WARNING!

To reduce the risk of injury do not attempt to adjust the seats while the car is in motion, the seat may move unexpectedly, which could cause loss of vehicle control.

Never allow a front seat passenger to travel with the seat backrest steeply reclined. Seat belts only offer protection when they are properly positioned on the body.

Improperly positioned seat belts may cause serious personal injury in the event of an accident.